


e Tel


Audio Phone

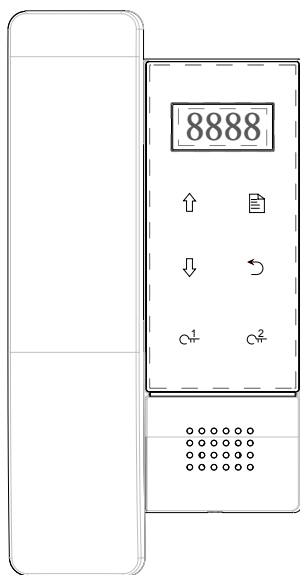

User Manual

① Read this manual carefully before using the product, and keep it well for future use.

1. Parts and Functions

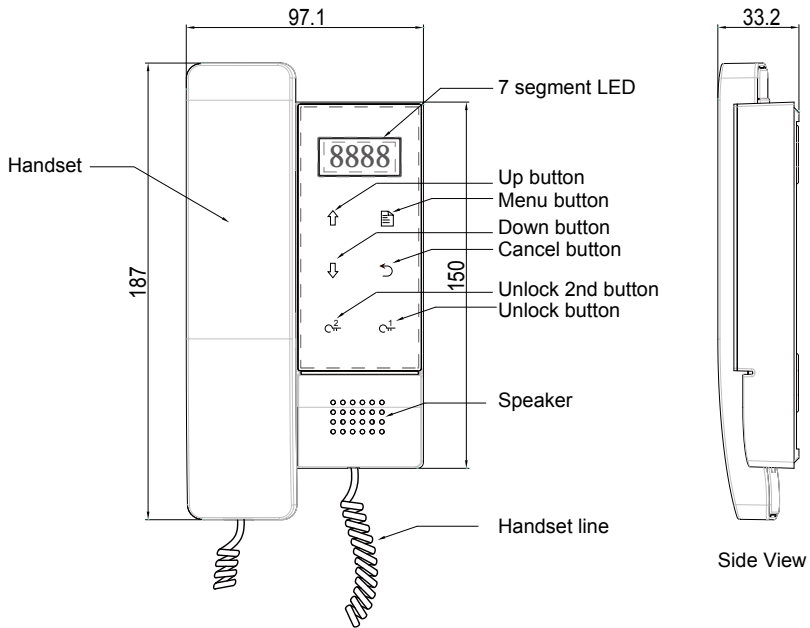

Key functions

7 segment LED	Display setting informations
Handset	Pick up to communicate with visitor
Hand line	Connect handset with monitor
Unlock button	Press to release the door
Unlock 2nd button	Press to release the second door
Up button	Press to move up or increase the value
Down button	Press to move down or decrease the value
Menu button	Press and hold for 2s to open the setting menu shortcuts.
Cancel button	Press to cancel the operations
Speaker	Send out vioce from the visitor

2. Operation Instructions

1) Door opening function:When visitor calls from outdoor station, the monitor rings, pick up handset to talk with the visitor, then press the **Unlock** button to open the door.If the system connect 2 locks,press **Unlock 2nd** button to open the second door.

2) Entrance monitoring: Pick up handset in standby mode,the LED will be shown a scroll information "Intr Call",press **Up** button or **Down** button to stop the scroll,and the LED show "ds-x"(x=1~4,refer to part 3-Numbers of door station),it means that the monitor select "x" door station to monitor.Press **Up / Down** button to increase/decrease the value,then press **Menu** button to activate the monitoring.

3) Inner call: Use **Up / Down** button to select "-ALL" item on LED,then press **Menu** button to activate the inner call,all monitors connected to the system will ring at the same time.Pick up any monitor,the others will stop ringing immediately.(note that the user code must be the same for all monitors to activate the inner call function)

4) Intercom call:Use **Up / Down** button to select "C-xx" (xx=00~31,refer to part3-Numbers of indoor monitor)item on LED,then press **Up / Down** button to increase/decrease the value,and press **Menu** button to confirm the intercom calling.(note that the user code must be different for all monitors to activate the intercom call function)

3. Setup Instructions

Press **Menu** button and hold for 2s in standby mode,the LED will be shown a scroll information "User Set-",press **Up** button or **Down** button to stop the scroll,and the LED show the setting items.Press **Menu** button to select next setting items.

Setting Item	LED state	Description	Default
Door station call tone	1-xx	Set the ring tone calling from outdoor station.Total 12 pieces ring tones can be selected(xx=01~12),press Up button or Down button to increase/decrease the value,settings will be performed immediately.	02
Intercom call tone	2-xx	Set the ring tone calling from intercom call or inner call.Total 12 pieces ring tones can be selected(xx=01~12),press Up / Down button to increase/decrease the value,settings will be performed immediately.	12

Setting Item	LED state	Description	Default
Ring volume	3-rx	Set volume for call tone, rang from 0~9.	6
Speaker volume	4-Lx	Set volume for speaker, adjust the voice from outdoor, rang from 0~9.	6
Microphone volume	5-tx	Set volume for microphone, adjust the voice from user, rang from 0~9.	6
Numbers of door station	6-0x	Maximum 4 door stations can be selected, this item is used to set the numbers of door station that can be surveilled by indoor monitor. refer to part 2 ->Entrance Monitoring.	1
Numbers of indoor monitor	7-xx	Maximum 32 indoor monitors can be selected, this item is used to set the numbers of indoor monitor that can be selected to intercom. refer to part 2 ->Intercom call.	04
Keypad sensitivity	8-sx	Rang from 0~2, The larger you set the value, the stronger it will be, "0"-slow, "1"-normal, "2"-fast.	1
Slave address setting for monitor	9-dx	Rang from 0~3, "0"-master monitor, "1~3"-slave monitor.	0
Restore to default setting	9-FS	The restore to default function allows the user to recover the settings to factory setting. Select "9-FS" item on LED, then press Up button, "YES" will be asked, press Up button again, the LED will be shown "SUCC", that means settings are restored to default.	-

4. Specification

- Power Supply: DC24V
- Power Consumption: standby 20mA, working 70mA
- 7 segment LED: 4 digits dynamic
- Wiring: 2 wires, non-polarity
- Dimension: 187(H)X97(W)X33(D)mm