




*easydoor*<sup>TM</sup>



## VM 35 User Manual

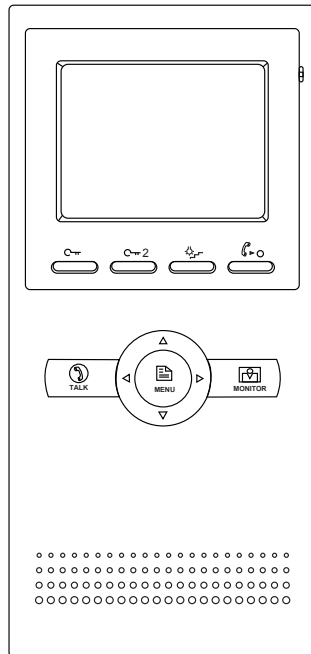



# CONTENTS

1.Parts and Functions .....	1
2.Monitor Mounting .....	1
3.Operations.....	2
3.1 Answering a door call .....	2
3.2 Door release.....	2
3.3 Entrance monitoring .....	3
3.4 Intercom function.....	3
3.5 Image and Volume Adjust .....	3
3.6 Basic Setup Instructions.....	4
4.Specifications .....	5

# 1.Parts and Functions

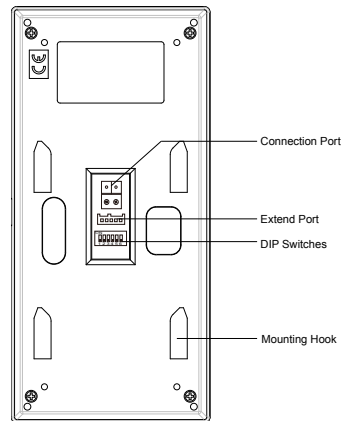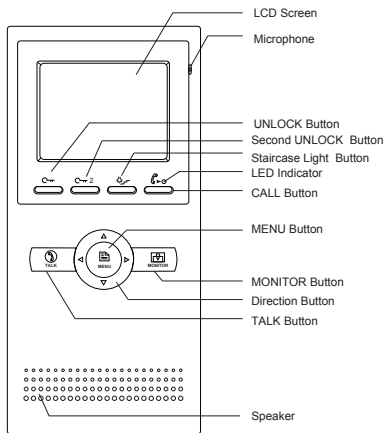

# 2.Monitor Mounting

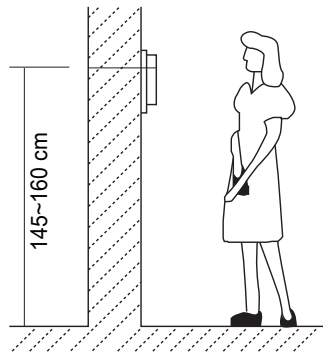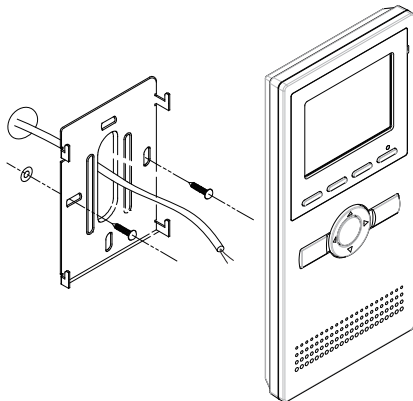


- i. Use the screws to fix the Mounting Bracket on the mounting box.(fitting accesories includes a Bracket (Two pieces of 4X25 screws are needed for fastening the Mounting Bracket), Special 2 wire cables to connect with Monitor)
- ii. Wire the system correctly(see the later connection chapter) then hang the Monitor on the Mounting Bracket firmly.


# 3.Operations

## 3.1 Answering a door call


- i. Press "CALL" button on doorstation.
- ii. The monitor rings,and the visitor will be seen on video monitor.  
note: the screen turns off after 40 seconds if nobody answers.

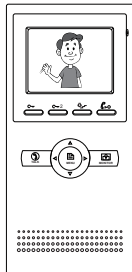

- iii. Press "TALK" button,you can communicate hands free with the visitor for 90 seconds.  
After finishing communication,press "TALK" button again to end the communication.

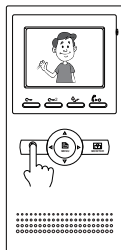


 press TALK button again  
finish the communication →






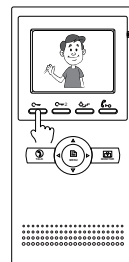


## 3.2 Door release

 - i. During communication,press "UNLOCK" button to release the door.(If two locks connected to door camera,press a lock button to open the matching lock)




 




### 3.3 Entrance monitoring

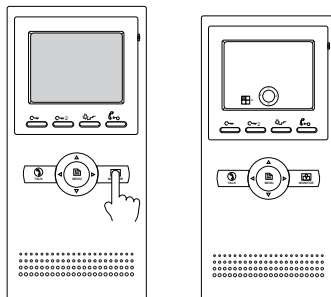- i. Press "MONITOR" button when in standby.
- ii. The screen will show the icon , press  to choose the first camera, the screen will display the image from the first door camera. Similarly, Press  to choose the second one, Press  to choose the third one, Press  to choose the fourth one.
- iii. Press "MONITOR" button again to end monitoring.





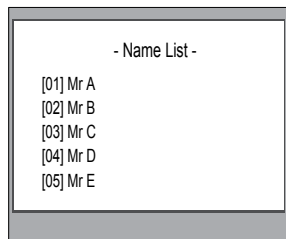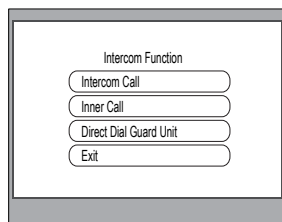


### 3.4 Intercom function

- i. Press "CALL" button in standby mode to enter intercom function page.
- ii. **Intercom Call:** User in one apartment can call other apartments in the system. Use  /  to select the item and press MENU button to enter the **Name List** page. (the namelist will be created automatically by the system). Selete a name on the screen then press CALL Button to call. Use  /  button to scroll to Last / Next name list page. note:1. Press "CALL" button again to redial. 2. Press "TALK" button to cancel the call.
- iii. **Inner Call:** If multi Monitors are installed in the same apartment, select Inner Call all the other Monitors will ring at the same time, whichever Monitor answers the call, conversation is started.
- iv. **Direct Dial Guard unit:** A Monitor can be assigned as Guard Unit Monitor; when the Guard Unit Monitor answers the call, conversation with the guard person is started..



### 3.5 Image and Volume Adjust

- i. During monitoring or talking, press "MENU" button, the **ADJUST MENU** will be displayed.
- ii. Press  /  to decrease or increase the value; Use  /  button to select the next adjustment item.
- iii. The first item is Scene mode selection: Total 4




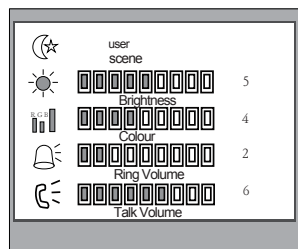


SCREEN modes can be selected in sequence: **NORMAL**, **USER**, **SOFT** and **BRIGHT**. Whenever you modify **BRIGHTNESS** or **COLOUR**, **SCENE** item will be set to **USER** mode automatically.




- iv. The **BRIGHTNESS** and **COLOR** item is for the image quality setting, adjust the value to get the best image you like.
- v. The **Ring Volume** and **Talk Volume** items are ring tone and talking volume adjustment.
- vi. Note that all the modifications will be done immediately after the operation. Press "MENU" button to quit the adjust page.

### 3.6 Basic Setup Instructions

- i. Press "MENU" button in standby mode, the date/time page will be displayed. The first line shows the current time, the second line shows the current date and weekday.(the date/time page will close in 3 minutes if no operation).
- ii. Press "MENU" button again to enter the **MAIN MENU**, Use ▲ / ▼ button to select the **SETUP MENU**, and then press "MENU" button to enter the item.
- iii. The **OUTDOOR TONE** and **INTERCOM TONE** item are for chord ring selection. Press ◀ / ▶ to increase/decrease the value. (alternatively, press the item itself in sequence to increase/decrease the value)
- iv. **AUTO RECORD**: If the item is set to ON, the Monitor will record the image automatically in 2 seconds after the visitor pressed the CALL Button on the Outdoor station (optional).
- v. The **ADVANCED SET...** item is for advanced settings. a password will be asked before entering. The default password is **2008**. So you can press ▲ / ▼ button to increase/decrease the value, Press ◀ / ▶ button to select the location, after finishing, press MENU button to enter next step.

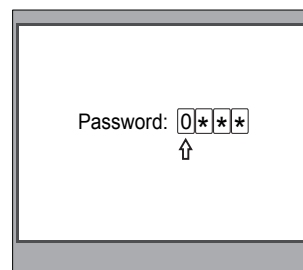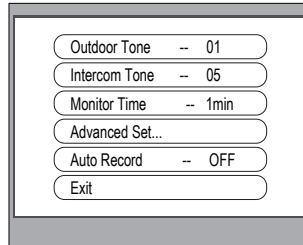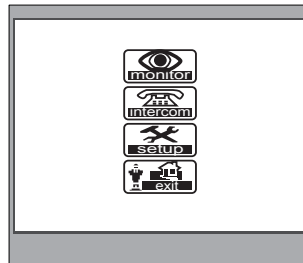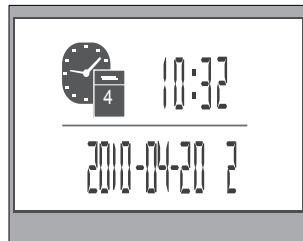

- vi. The **Slave Addr Set** item is for the master and slave user code setting, it is set by installer.
- vii. **Guard Unit Set**: if the item is set to **1**, the Monitor is assigned as a Guard Unit Monitor, for normal users, it should be set to **0**.
- viii. **Date/Time Set...**: Use ▲ / ▼ button to select the item. and then press MENU button to enter time/date setting page. after that Press ▲ / ▼ button to increase/decrease the value, Press ◀ / ▶ button to select the location, after finishing, press MENU button to save the settings.
- ix. **Other Settings...**: this item is for adding and deleting Remotes.
- x. **Information...**: this item will show the **hardware/software** version and voltage information of the Monitor. Select **Restore to default** item, then press MENU button. All settings will be restored to default.

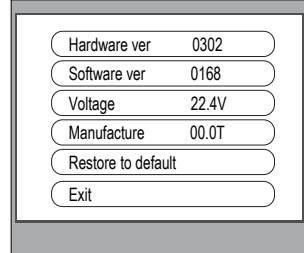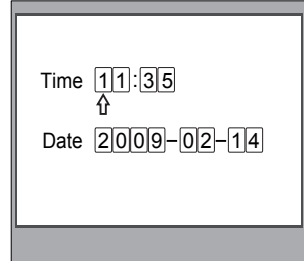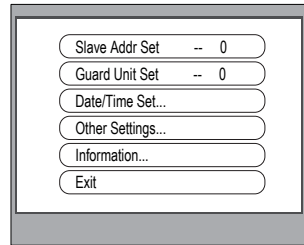

## 4. Specifications

- Power supply: bus powered
- Power consumption: Standby 2W; Working 5W
- Monitor screen: 3.5 Inch color TFT-LCD
- Display Resolutions: 320(R, G, B) x 240 pixels
- Dimensions: 220(H)×105(W)×20(D)mm